

3-D Adventure Projector™

Welcome to the 3-D Universe!

Get ready to blast off on a tour of the 3-D Universe! Your 3-D Adventure Projector™ will take you on an amazing Journey into Space. You will experience an exciting sight and sound tour of our solar system and beyond. Please read these instructions before beginning.

The following components are included:

- 3-D Projection Sphere
- Base
- Four stick-on rubber pads
- A pack of five "Journey into Space" image strips (A-E)
- An audio CD, "Journey into Space"
- Four pairs of 3-D Real™ Glasses

Prelaunch Preparations

Before departing, there are important prelaunch preparations to be made. Please note: Only adults should install and replace batteries.

1. Apply a stick-on rubber pad to the bottom of each of the four feet on the base. In some cases, they may be already be in place.
2. Open the battery door on the Projection Sphere using a small screwdriver (See Fig. 1). Insert three fresh type "C" alkaline batteries into the battery box. Make sure the "+" and "-" ends are placed correctly, as indicated in the battery box. Replace the battery door. Do not over-tighten the screws.
3. To test the projector light bulb, turn the switch so that it points to "ON." The projector should now light up. Turn the switch off so that it points to "OFF" (If the projector does not light up, recheck the battery placement. Make sure all three batteries are fresh. If it still does not light up, please refer to the section, "Maintenance" and make sure the projector light bulb is properly installed.)

Countdown


1. Place the projector in a room with a smooth, white wall or ceiling. It should be about three to five feet from the wall or ceiling onto which you will be projecting.
2. If you are projecting onto the ceiling, place the Projector Sphere on the Base so that the Lens points straight up. If you are projecting onto a wall, place it on the Base so that the Lens points to the wall. You can rotate the Projector Sphere on its Base to your desired angle.
3. Put the audio CD into a CD player.
4. Place the five Image Strips next to the projector in order from A to E.
5. Insert Image Strip A into the slot on the Projector Sphere, as indicated on the strip. You will feel a "click" for each image as you slide the strip. The "click" tells you that the image is centered for projection.
6. Turn projector switch on. Make sure image number 1 (Blast-off) is being projected. If it is upside-down or backwards, reinsert the image strip correctly following the instructions printed on the strip.

Liftoff

1. Close the drapes or blinds in the room and turn off the room lights.
2. Turn the Focus Disc to focus the image.
3. Put on the 3-D Real Glasses™. If you are wearing prescription glasses, place the 3-D Real Glasses™ over them.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Switch toy off before opening battery compartment.
- Insert batteries correctly. Match positive + and negative - signs.
- Alkaline batteries are recommended for best performance.
- Rechargeable batteries are not recommended.
- If rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- Do not recharge non-rechargeable batteries.
- Only use the batteries specified.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Do not mix old and new batteries.
- Remove dead or exhausted batteries.
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this product.
- Dispose of batteries safely. Recycle where available.
- Do not dispose of batteries in a fire or attempt to open the outer casing. Never short-circuit the battery terminals.
- Do not immerse battery-operated toys in water. Wipe clean only.

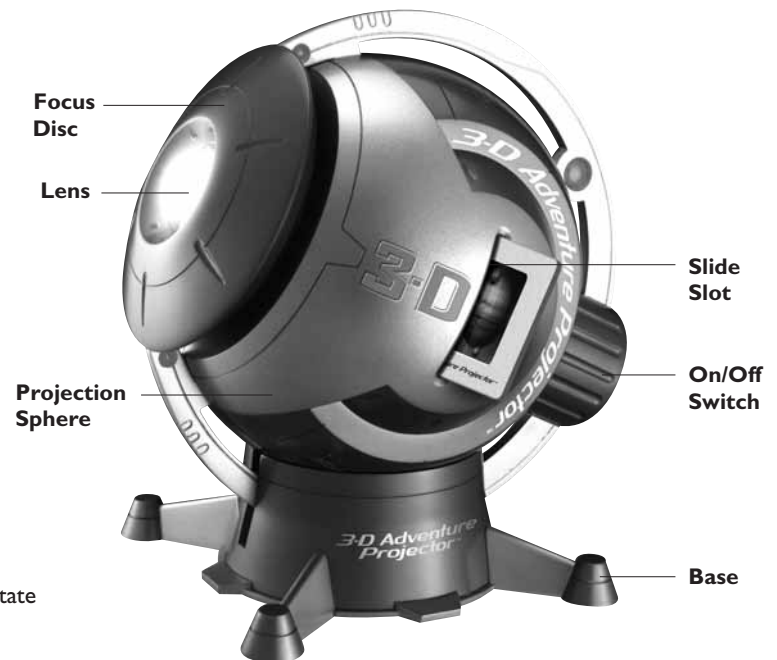

Taking the Journey

As you take the CD tour, a sound will tell you when to slide the strip to the next image. The narrator will also tell you when to change to the next image strip. Each of the 25 narration tracks is about 30 seconds long. You can pause the CD at any time to view each image for as long as you like.

Turn on the CD player, adjust the volume to a comfortable listening level, and enjoy the tour!

Reentry

Upon your return to Earth you can continue on to track 26. This contains fifteen minutes of music and sound effects without any narration. You can play it while you view the images over again.

Maintenance

Replacing the batteries (see Figure 1)

Open the Battery Door on the Projection Sphere using a small Phillips screwdriver. Insert three fresh, type C alkaline batteries into the battery compartment. Make sure the “+” and “-” ends are placed correctly as indicated (See Figure 1). Replace the Battery Door. Do not over-tighten the screws.

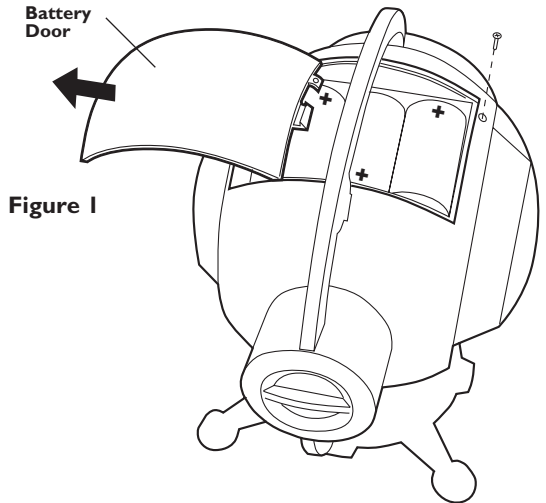



Figure 1

Replacing the projector light bulb

3-D Adventure Projector™ requires a 3.6 V, .85A or a 3.6V, 1 mA krypton light bulb. Please note: Only adults should install and replace the Bulb. Replacement bulbs can be purchased online at www.9.mailordercentral.com/unclemilton

1. Open the Projector Sphere housing as shown, using a small Phillips screwdriver to loosen the four screws (See Figure 2).
 2. Unscrew the two screws holding the Lens Module in place (See Figure 3) and carefully lift up. Be careful not pull too hard on the wire connection when lifting the Lens Module.
 3. Turn Lens Module over and take out the old Bulb from the Bulb Holder and insert replacement Bulb. Reinsert into bottom of the Lens Module (See Figure 4).
- Note:** Do not throw away the Bulb Holder, it is necessary to hold the Bulb in place and for it to function properly.
4. Replace Lens Module and screws, making sure the Tab is facing up and is inserted first into the On/Off Switch Tube (See Figure 3).
 5. Carefully reassemble the housing (See Figure 2).

Figure 2

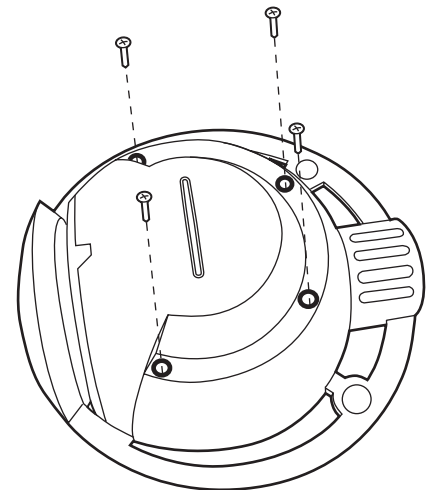

Care of glasses and projection lenses

Use a clean, soft cloth or lens tissue to clean the lenses.

Do not use tissue paper, as it may scratch the plastic lenses.

More 3-D Journeys

Look for other 3-D journeys for your 3-D Adventure Projector™ at your retailer or by checking out our web site at www.unclemilton.com. Each comes with a pack of 25 images, an audio CD tour, an extra 2 pairs of 3-D Real Glasses™ and a protective storage pack.

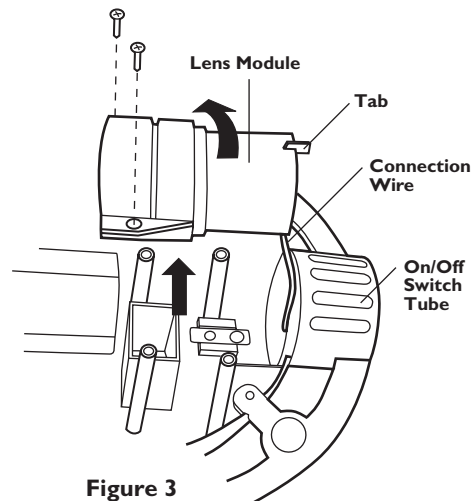


Figure 3

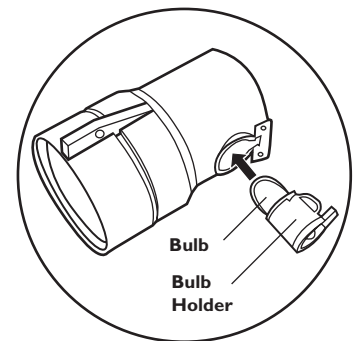


Figure 4



UMI, Inc. Westlake Village, CA 91362

1.888.742.2484 Fax: 818.707.0878 www.unclemilton.com

© UMI. All rights reserved. 3-D Adventure Projector is a trademark of UMI. Printed in China.