



Requires
3 "C" batteries
(Not included)

INDIANA JONES™

CRYSTAL SKULL ADVENTURE PROJECTOR™

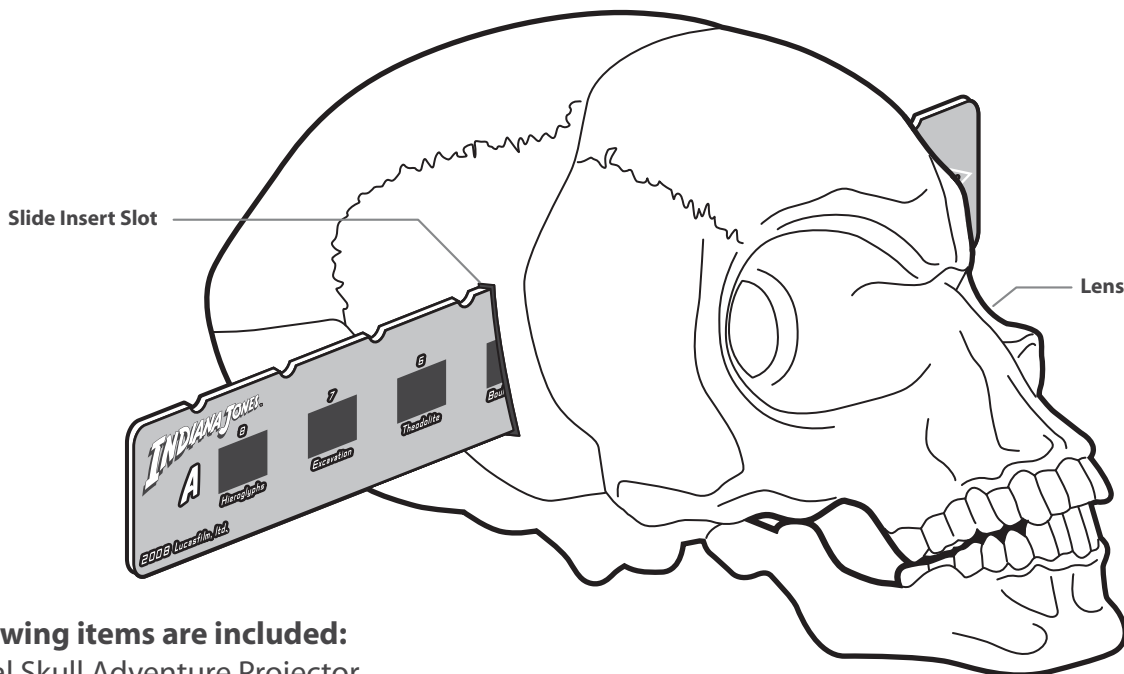



Figure 1

The following items are included:

- Crystal Skull Adventure Projector
- Three image strips
- Image strip holder
- Audio CD, "Archeology Adventure"

INSTALLING BATTERIES

Tool required — Small Phillips-head screwdriver  (not included).

1. Remove the battery compartment cover on the projector using a small Phillips-head screwdriver (see Figure 2). Insert three fresh type "C" alkaline batteries into the battery compartment. Make sure the "+" and "-" ends are placed correctly, as indicated in the battery compartment. Replace the battery compartment cover. Do not over-tighten the screw.

EXPLORATION

1. Place the projector in a room with a smooth white wall. It should be about two feet from the surface onto which you will be projecting.
2. Place the projector upright so that the lens points to the wall.
3. Put the audio CD into a CD player.
4. Place the three image strips next to the projector in order from "A" to "C".

5. Insert image strip A into the slot on the projector as indicated on the strip. You will feel a "click" for each image as you slide the strip. The "click" tells you that the image is centered for projection.
6. Turn projector switch to "ON" make sure image number 1 is being projected. If it is upside-down or backwards, reinsert the image strip correctly following the instructions printed on the strip.

BEGIN YOUR JOURNEY

1. Close the drapes or blinds in the room and turn off the room lights.
2. Move the skull forward or backward from the wall to focus the image. (A sound on the audio CD will tell you when to slide the strip to the next image. The narrator will tell you when to change to the next image strip. Each of the 24 narration tracks is about 30 seconds long. You can pause the CD at any time to view each image for as long as you like.)
3. Turn on the CD player, adjust the volume to a comfortable listening level, and enjoy the tour!

MAINTENANCE

Use a clean, soft cloth or lens tissue to clean the lens. Do not use tissue paper, as it may scratch the plastic lens.

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

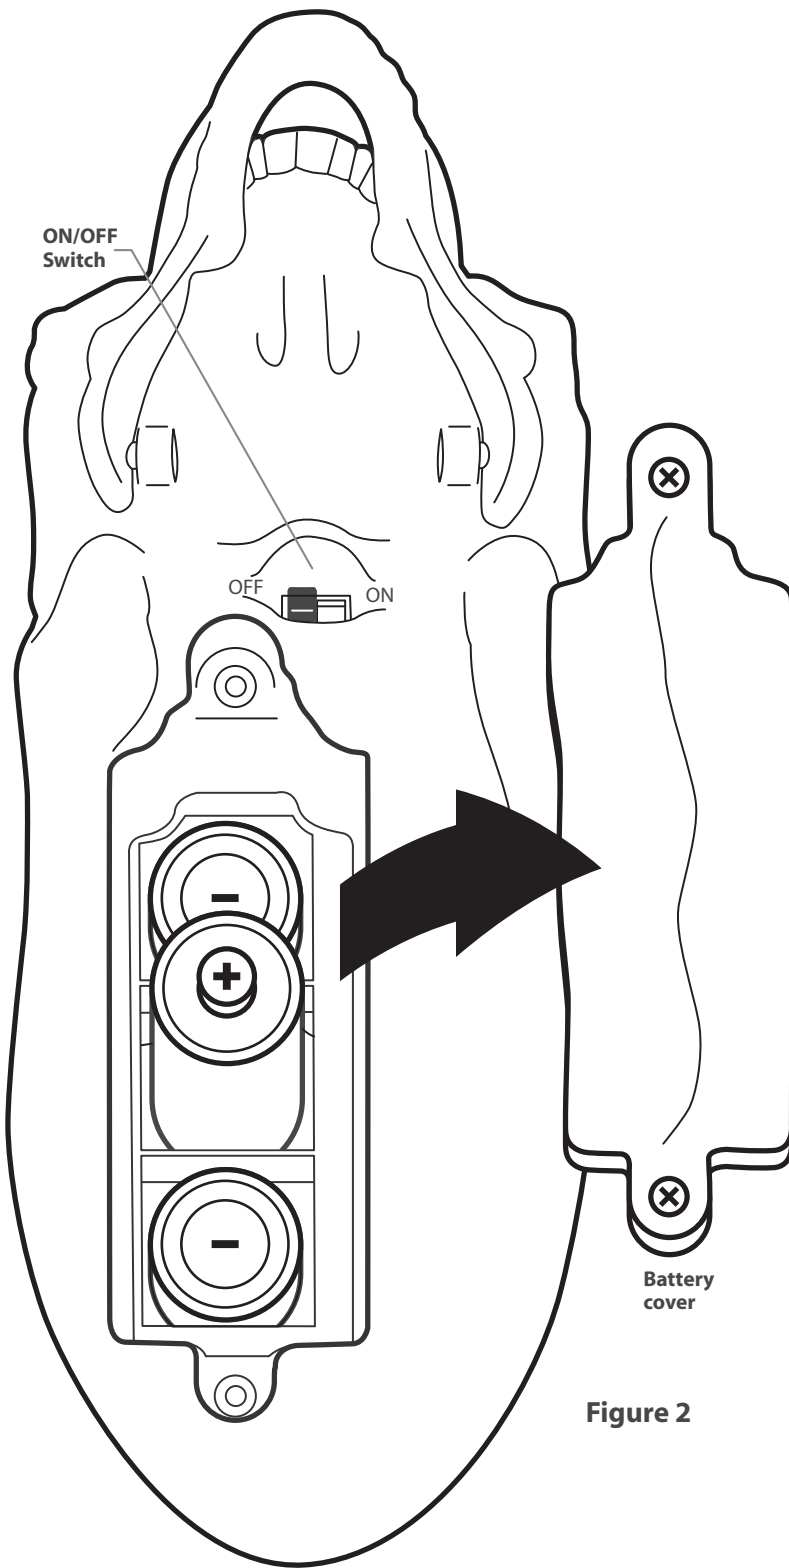


Figure 2

DO NOT VIEW THE LIGHT SOURCE DIRECTLY

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE - DO NOT DISCARD

Questions? Comments? Please contact us. We can help! Call 1-888-742-2484 or go to www.unclemilton.com



© 2008 Lucasfilm Ltd. & TM where indicated.
All rights reserved. Used under authorization.

"The Raiders March"
(John T. Williams)

© Bantha Music (BMI) All rights administered by
Warner-Tamerlane Publishing Corp.
All rights reserved. Used by permission.

"The Well Of The Souls" (30 Seconds Only)
(John T. Williams)

© Bantha Music (BMI) All rights administered by
Warner-Tamerlane Publishing Corp.
All rights reserved. Used by permission.



Uncle Milton Industries, Inc.
31186 La Baya Dr., Westlake Village, CA 91362
1-888-742-2484 Fax: 818-707-0878
www.unclemilton.com
©UMI. All Rights Reserved. Printed in China.