

TORCH IN MY ROOM™

Light-up Explorer's Torch

5+
2085

How to install batteries


1. Gently press down on flame and turn counter clockwise to detach flame from handle.
2. Insert 2 AA/LR6 batteries (not included) as shown.
3. Reconnect Flame to Handle and turn clockwise to lock.

Hanging the Torch

The Torch Hanger is only intended to mount on a vertical wall.

Locate stud in wall or use the wall mounting hardware included to mount the Torch Hanger to the wall as shown.

To Turn On: 
Twist the flame clockwise

Twist the flame counter clockwise to turn off. 

AA/LR6 x2 Batteries are not included.
Requires 2 x 1.5V AA/LR6 batteries.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

Questions? Visit unclemilton.com

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy before being charged
- Rechargeable batteries are only to be charged under adult supervision
- Different types of batteries or new and used batteries are not to be mixed
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Do not dispose of batteries in fire. Battery may explode or leak.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IGS Corporation Limited

2 Merlin Business Park,
Fair Oak Close,
Exeter, Devon, EX5 2UL, UK
Tel: +44 (0) 845 600 1676

Hunter Leisure (Aust) Pty Ltd

94 Keilor Park Drive
Tullamarine, Vic, 3043
Australia N14756



MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.

P.O. Box 6281

THOUSAND OAKS, CA 91359, U.S.A.

©2013 UMI. All rights reserved. ® and TM designate trademarks of

Uncle Milton Industries, Inc.

PRINTED IN CHINA



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.
Adult assembly required.