



0+

Room Light Instructions

AAA/LR03 x2 Batteries not included
Requires 2 x 1.5V AAA/LR03 batteries
AA/LR6 x3 Batteries included
Requires 3 x 1.5V AA/LR6 batteries


Installing Batteries into Room Light

Tool required - Small Phillips head screwdriver

For best performance, we recommend replacing the batteries that came with this toy with 3 AA/LR6 batteries.

1. Use a Phillips head screwdriver to remove the battery cover.
2. Insert 3 AA/LR6 batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment. Replace cover.

If during use the sounds or lights become faint or stop, it is time for an adult to change the batteries.

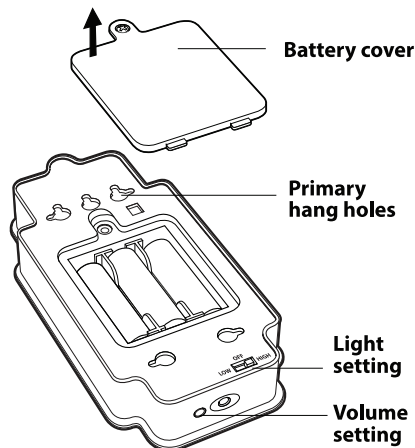

Hanging Your Room Light

IMPORTANT! Unplug "Try Me" wires. Switch your room light to either HIGH or LOW brightness before hanging on the wall.

Hang your Room Light by using one of the primary hang holes.

OR


To hang your Room Light in an angled position for products like Big Red Rocket, SEE TEMPLATE ON BACK.

Note: Product is only intended to mount on a vertical wall.



Applying Your Stickers

(note: for Mr. Happy Moon product only)
Press the star stickers firmly against the wall around the Mr. Happy Moon room light in the desired position. Keep these stickers out of reach from children under 18 months old.

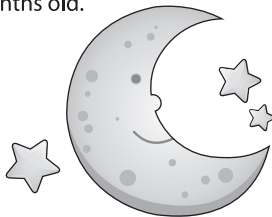

Using Your Room Light

PLEASE NOTE: The unit will not activate without the remote control.

NOTE: For best illumination, use in a darkened room.

Light Setting

Slide the ON/OFF switch, located on the back of your room light, to either HIGH or LOW brightness.

Volume Setting

Press the volume setting button to select either High or Low volume

Room Light Activation

To activate your room light, press the button on your remote. Each time you press the button, a different mode will be activated as follows:

Mode 1 – Light & Sound – Around 15 min.

Mode 2 – Light Only – Around 20 min.

Mode 3 – Sound Only – Around 20 min.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Uncle Milton

MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.
P.O. Box 6281, THOUSAND OAKS, CA 91359 USA
©2014 UMI. All rights reserved. ® and TM designate trademarks of Uncle Milton Industries, Inc.
MADE IN CHINA

WARNING!

Adult set-up required. Keep the remote control out of reach of children under 18 months. Keep batteries away from children under 3 years. Do not hang the Room Light directly above the sleeping position of a child.

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD
Questions? Visit unclemilton.com

