

Wild RC Tarantula™

Remote Control Tarantula with Light-up Eyes

 
AAA/LR03 x2 Batteries not included
Requires 2x 1.5V AAA/LR03 batteries

AA/LR6 x2 Batteries not included
Requires 2 x 1.5V AA/LR6 batteries

Installing batteries into tarantula

Tool required - Small Phillips head screwdriver 

- Using a Phillips head screwdriver remove the battery cover from the bottom of the tarantula.
- Insert 2 "AAA" batteries and replace cover.

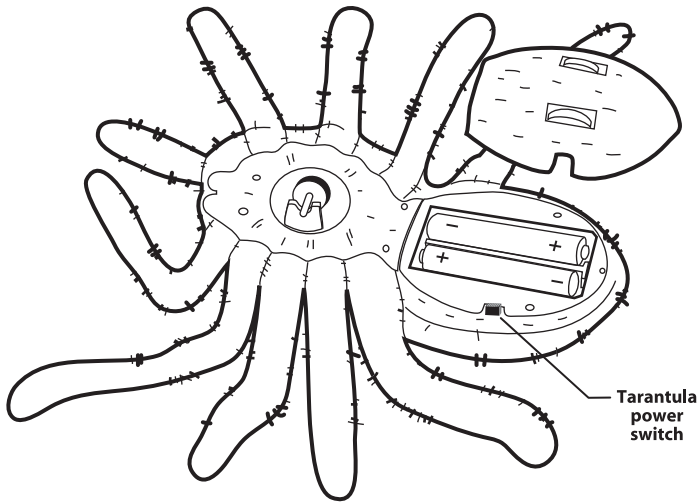


BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.

Using your Wild RC Tarantula

 
- Turn the power switches to the "ON" position on both the controller and tarantula.
- Move the tarantula forward or make it turn using the buttons on the controller.

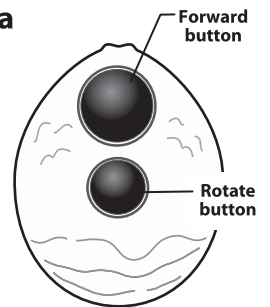

For best performance use your RC Tarantula on a smooth, flat surface like hardwood or linoleum floors. Not intended for grass, carpet or dirt.

Install batteries into controller

 - Using a Phillips head screwdriver remove the battery cover from the back of the controller.
- Insert 2 "AA" batteries and replace cover.

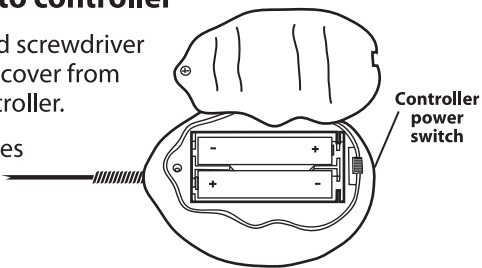

FCC ID: XCY2027UMI2010

27 Mhz

MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

⚠ WARNING :

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected;
- Consult the manufacturer or an experienced radio/TV technician for help.



National Geographic's net proceeds support vital exploration, conservation, research, and education programs.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE - DO NOT DISCARD

Questions? Visit unclemilton.com

Uncle Milton

MANUFACTURED BY
UNCLE MILTON INDUSTRIES, INC.
P.O. Box 6281
THOUSAND OAKS, CA 91359 USA
©2012 UMI. All rights reserved. ® and TM designate
trademarks of Uncle Milton Industries, Inc.
MADE IN CHINA

NATIONAL GEOGRAPHIC™

Parents: Follow your instincts to the TV channel that's all about animals. Call your cable or satellite provider to get Nat Geo WILD.
Natgeowild.com

© 2012 National Geographic Society
NATIONAL GEOGRAPHIC and
Yellow Border Design are trademarks
of the National Geographic Society.
All rights reserved.

16419-0250-0212-V01