

**AA/LR06 x2** Batteries not included  
Requires 2 x 1.5V AA/LR06 batteries


**AAA/LR03 x2** Batteries not included  
Requires 2 x 1.5V AAA/LR03 batteries

**6+**  
2034

27MHz



### Installing batteries into the remote control

1. Using a Phillips head screwdriver  remove the battery door from the back of the controller (See Fig. 1).
2. Insert 2 "AA" batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment.
3. Replace the battery cover and tighten the screw.

 
 
 
### Installing batteries into the snake

1. Using a Phillips head screwdriver remove the battery doors from the bottom of the snake (See Fig. 2).
2. Insert 2 "AAA" batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment.
3. Replace the battery doors and tighten the screws.

### Using Your R/C Snake®

1. Turn the power switches to the "ON" position on both the controller and the snake (See Fig. 1 and 3).
2. Move the snake forward and backwards, left and right using the buttons on the controller.

**Note: For best performance use your R/C Snake® on a smooth flat surface like a hardwood or linoleum floor.**

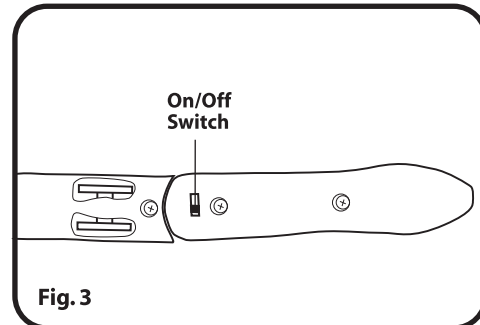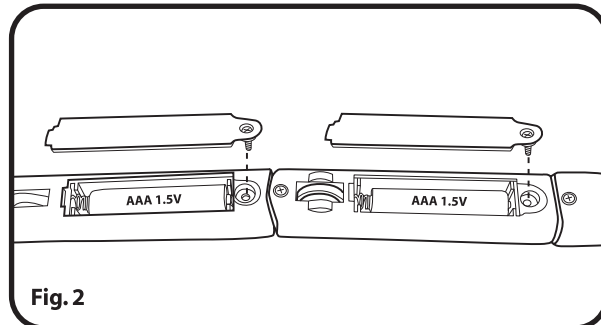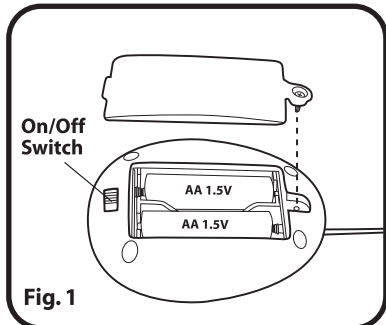

#### BATTERY SAFETY INFORMATION

- Batteries are small objects. Batteries must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries for prolonged storage.
- Only batteries of same or equivalent type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC ID: S362035UMI2005 or N9B2036UMI2006**

**27Mhz  
MADE IN CHINA**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**⚠ WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment**

**KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD**

Questions? Visit [unclemilton.com](http://unclemilton.com)

**Uncle  
Milton®**

MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.  
P.O. Box 6281 THOUSAND OAKS, CA 91359 USA  
©2011 Uncle Milton Industries, Inc., all rights reserved.  
® and TM designate trademarks of Uncle Milton Industries, Inc.  
PRINTED IN CHINA

2034-0250-0311-V01